ANNUNCIATOR MODEL 561R

FLAIR ELECTRONICS

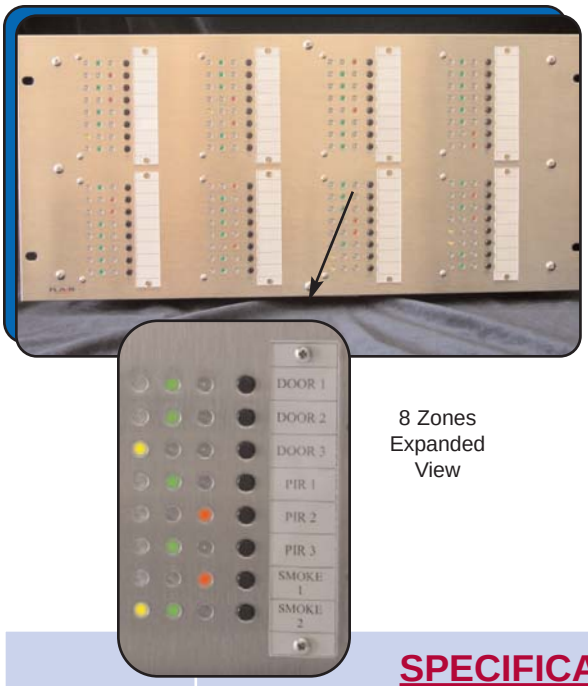

8 Zones Expanded View

FEATURES:

- Simple, Highly Visual Display
- One Touch Zone Control
- Micro-Controller Based
- Fully Programmable with Free Software
- Monitor Closed, Open and Multi-State Circuits (High Security)
- Input to Output Mapping (Multiple Outputs per Zone)
- Interface with Standard Controls via Communication Bus
- Up to 160 Zones with more than 30 Options

SPECIFICATIONS

MOUNTING	Rack
SIZE	19” x Variable Height x 2 1/2”
COLOR	Black Anodized Back Box Stainless Steel Faceplate
POWER	Includes 12 VDC Power Supply Requires 110 VAC Input
INPUTS	Normally Closed, Normally Open or High Security Multi-Sate End-of-Line Resistor Loop (Color Coded)
OUTPUTS	One Open Collector Output per Zone Rated at 24 VDC, 100 mA (Color Coded)
OTHER	Four Auxiliary Control Inputs and 2 Common Zone Outputs may be programmed for a variety of functions

Intrusion
Contacts, Motion Sensors, Panic Buttons, Cameras

Nurse Call
Panic Buttons, Fall Sensors, Cameras

Perimeter
Fence Vibration Sensors, Motion Sensors, Cameras

Flood
Water Sensors

Accessories from Flair:

- *Magnetic Contacts*
- *Fence Vibration Sensors*
- *Water Sensors*
- *Dialers*
- *Remote Graphic Displays*

OPERATION: *Simple yet Sophisticated* .....

Flair Multi-Zone Annunciators can be used as "stand alone" annunciators or interface with any other control panel via communication bus. Slave configurations are also available for all models. Each zone has a green LED for status, a red LED for alarm memory, a yellow LED for shunt and a zone control button for acknowledge, reset and bypass functions. Zone and common input and output type, timers and other features are programmable with easy to use free software.